



Miniveyor Support Feet Kit

(Part No. MVA-072010)

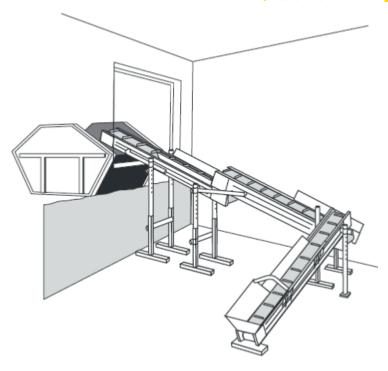

you must ensure that the tube is level with the end of the top or side clamp or protruding any distance required through the side clamp. You must pay particular attention to ensure that the tube itself is level with the edge of the top or side clamp and not the end caps as this would mean that the tube itself is 5mm short of being flush with the

When clamping the mounting tubes edge. See figures 2 and 3,

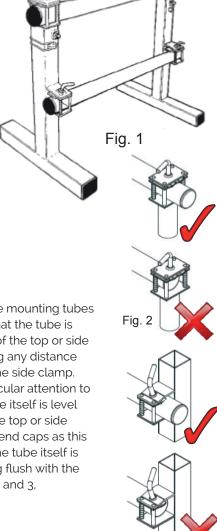

Miniveyor structure and then clamped through the top mounting clamp on each leg. A further mounting tube is fixed through the lower side clamp on the leg for support. See figure 1.

construction tube location holes built into each end of the

The Miniveyor Support Feet Kit is an invaluable

accessory that allows a user to set up multiple

Miniveyor units quickly and simply without the

need for tools. The kit consists of three pairs of

telescopic legs, mounting tubes, cantilever link

The mounting tubes are inserted through the 50mm

and fixed leg support.

miniveyor.co.nz

SALES . LEASE . HIRE . CALL 0800 744 382

PO Box 38 485, Howick, Auckland 2145, New Zealand. Email: dave@miniveyor.co.nz